
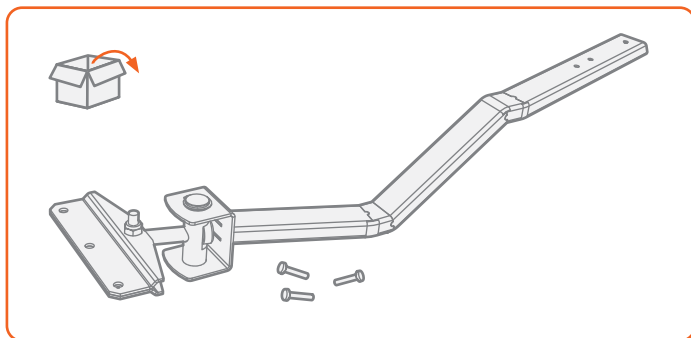
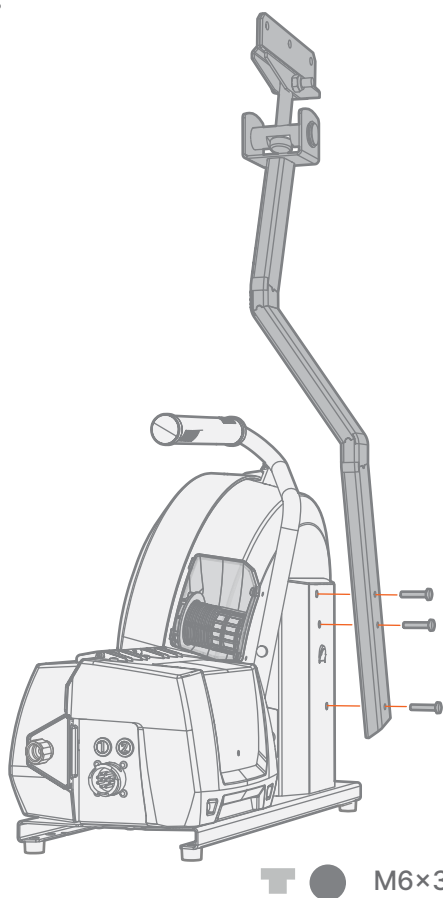
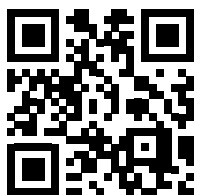


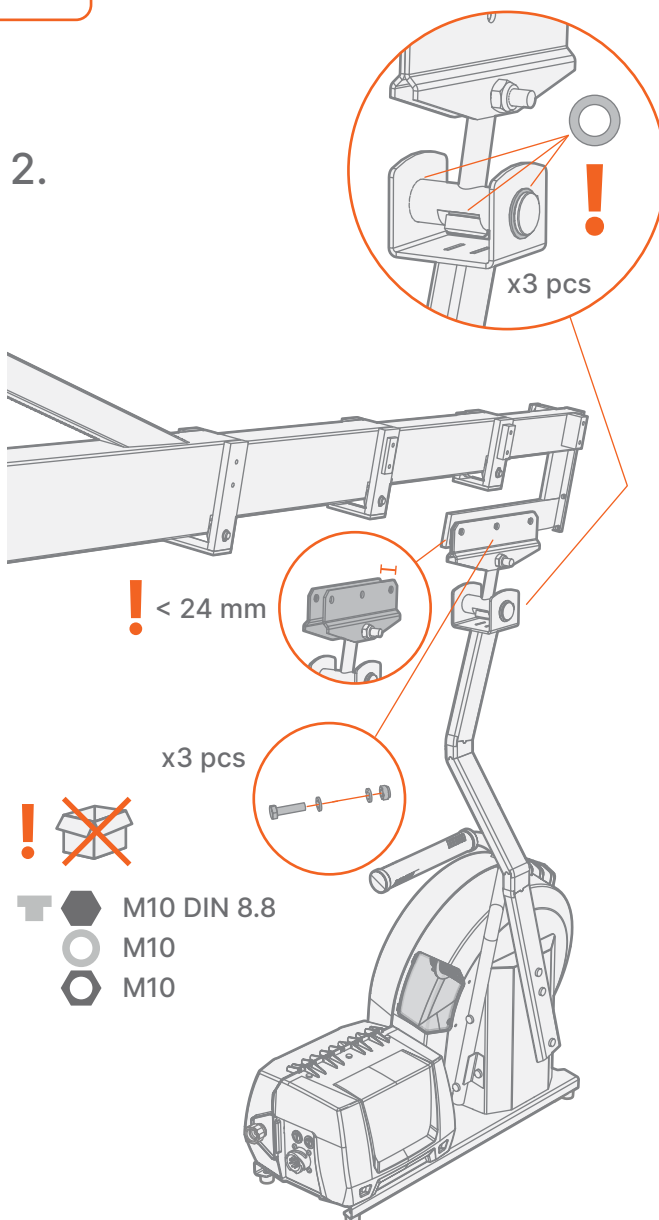

1.


  M6×30 ×3 pcs

2.


userdoc.kemppi.com

Mounting instructions

W030681 R00

Monteringsvejledninger – Montageanleitungen – Instrucciones de montaje – Asennusohje –
 Instructions de montage – Upute za montažu – Istruzioni di montaggio – Bevestigingsinstructies –
 Monteringsinstruksjoner – Instrukcja montażu – Adisionais de montagem – Instrucțiuni de montare –
 Инструкции по монтажу – Monteringsanvisning – Montaj talimatları – 安装指导

