








6

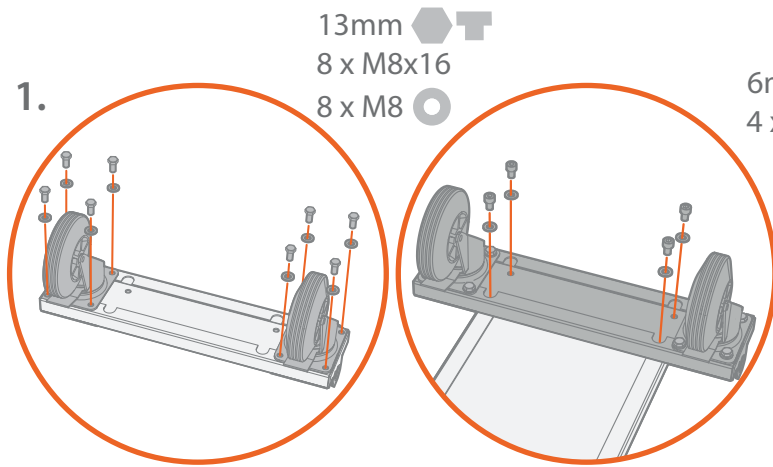

6mm 4 x M8x16

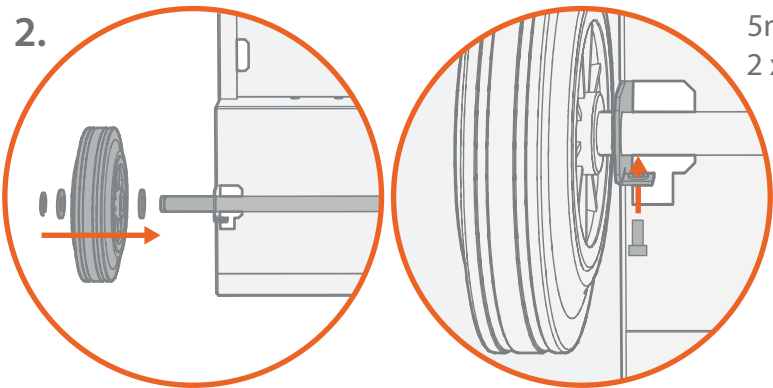

5mm 2 x M6x16

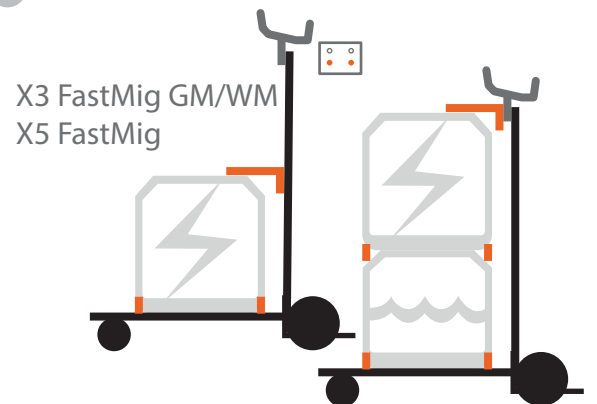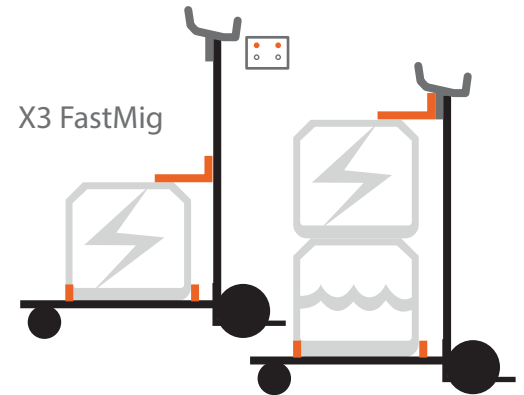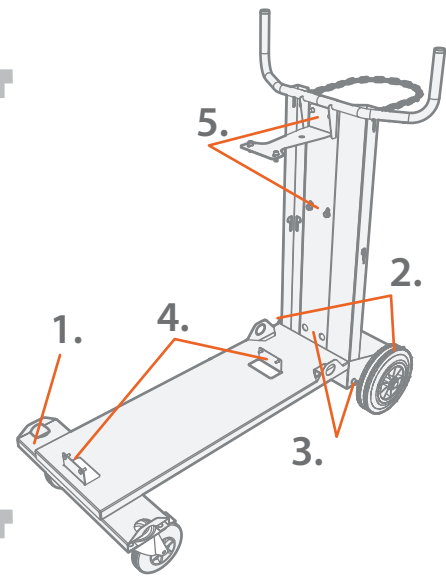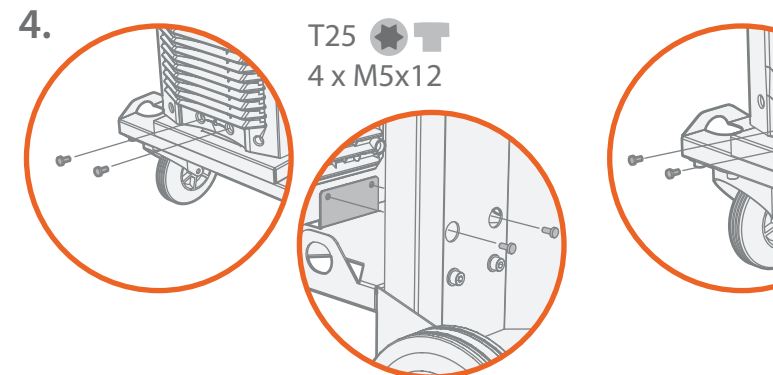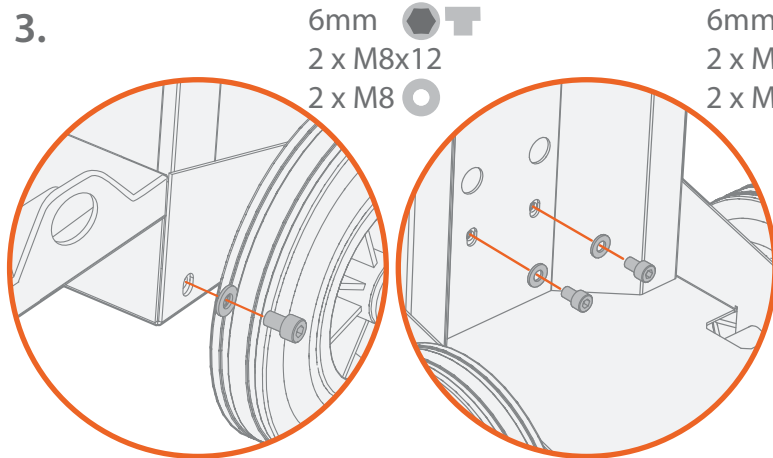


Mounting instructions

W027088 R04


Monteringsvejledninger – Montageanleitungen – Instrucciones de montaje – Asennusohje –
Instructions de montage – Upute za montažu – Istruzioni di montaggio – Bevestigingsinstructies –
Monteringsinstruksjoner – Instrukcja montazu – Adisionais de montagem – Instrucțiuni de montare –
Инструкции по монтажу – Monteringsanvisning – Montaj talimatları – 安装指导



5.

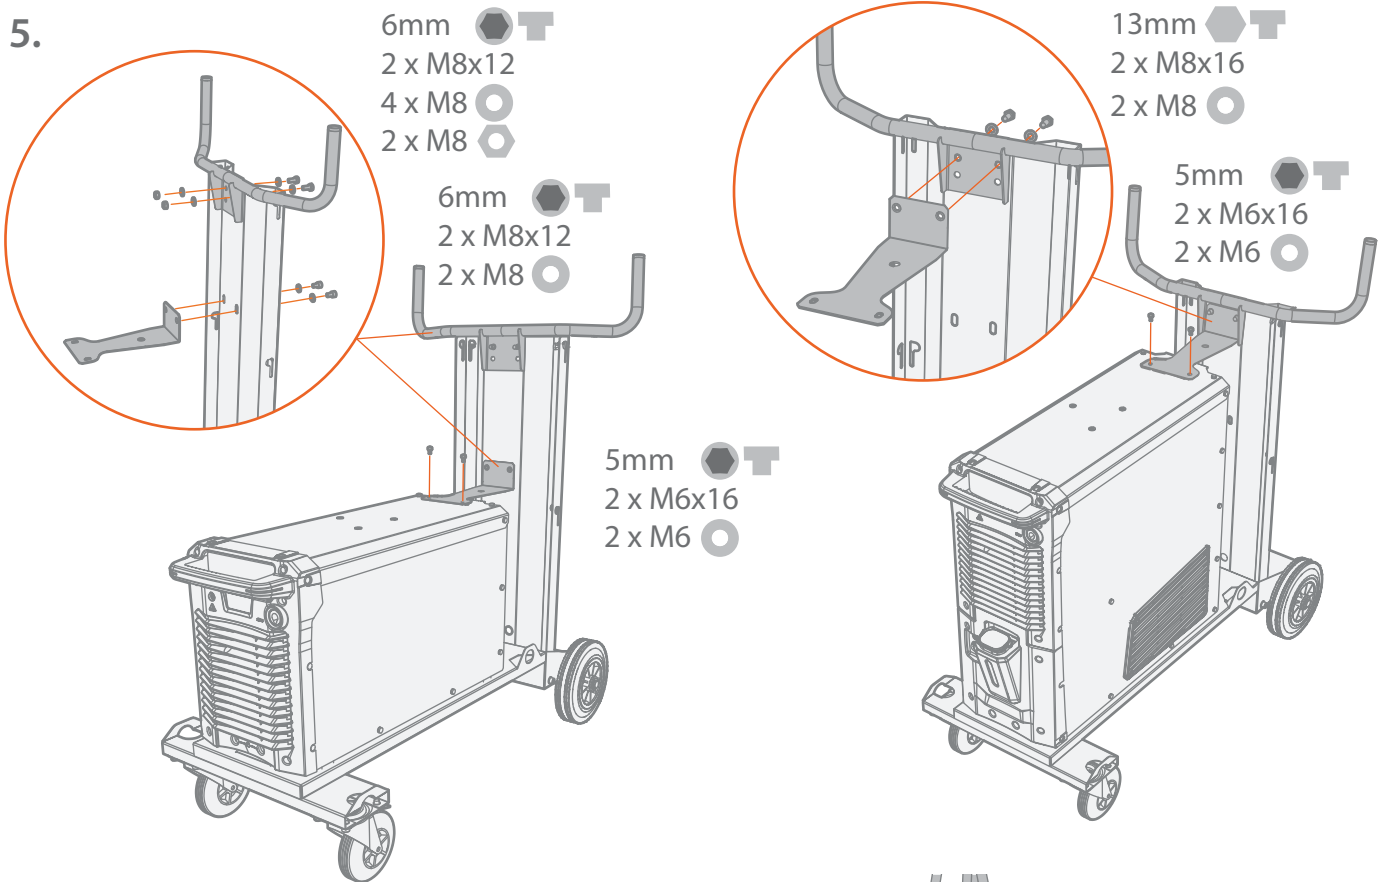

6.

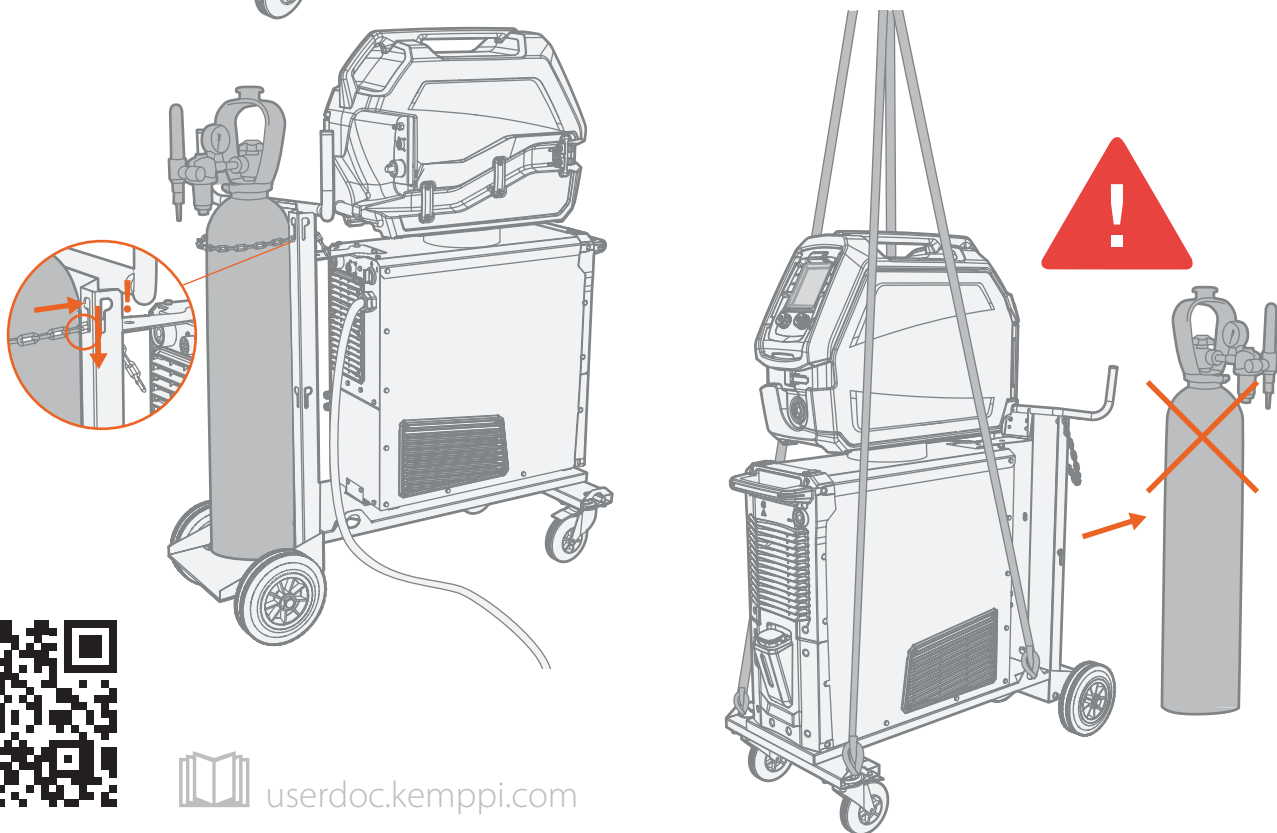

userdoc.kemppi.com

Mounting instructions

W027088 R04

Monteringsvejledninger – Montageanleitungen – Instrucciones de montaje – Asennusohje –
 Instructions de montage – Upute za montažu – Istruzioni di montaggio – Bevestigingsinstructies –
 Monteringsinstruksjoner – Instrukcja montażu – Adisionais de montagem – Instrucțiuni de montare –
 Инструкции по монтажу – Monteringsanvisning – Montaj talimatları – 安装指导

