



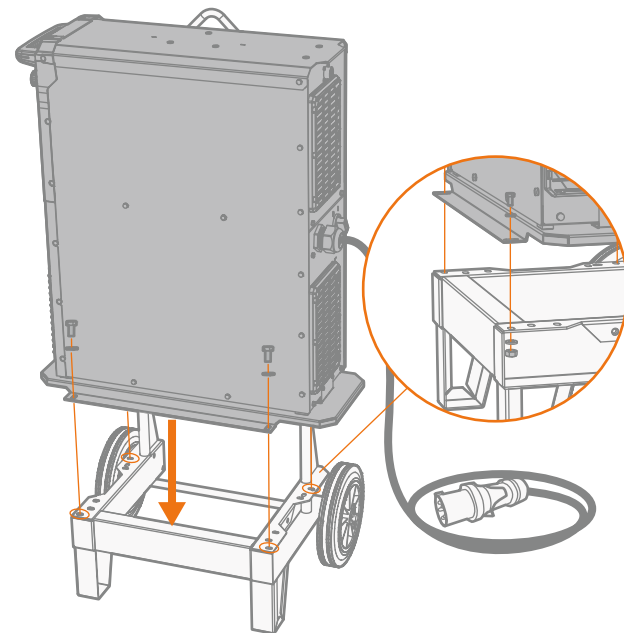


2. T25 
4 x M5x12

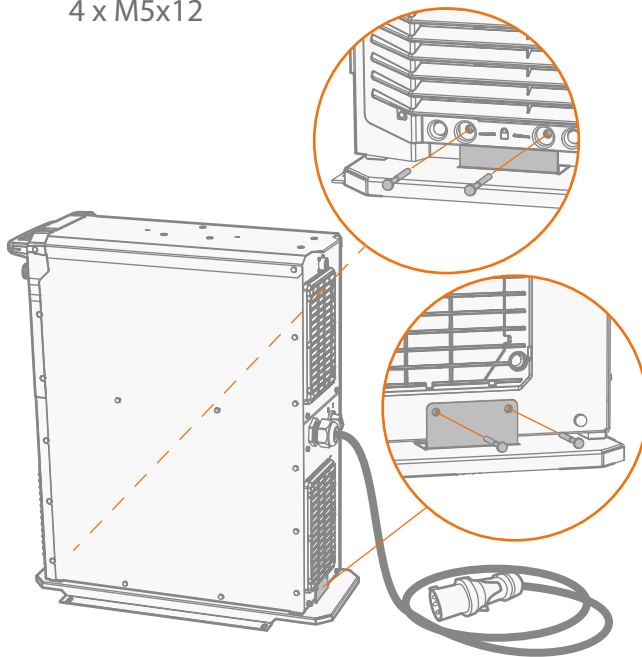

3. 13mm 
4 x M8x12
8 x M8 
4 x M8 



 userdoc.kemppi.com


Mounting instructions


W028592 R01



Monteringsvejledninger – Montageanleitungen – Instrucciones de montaje – Asennusohje –
 Instructions de montage – Upute za montažu – Istruzioni di montaggio – Bevestigingsinstructies –
 Monteringsinstruksjoner – Instrukcja montażu – Adisionais de montagem – Instrucțiuni de montare –
 Инструкции по монтажу – Monteringsanvisning – Montaj talimatları – 安装指导



4. 10mm  
 2 x M6x16
 2 x M6 

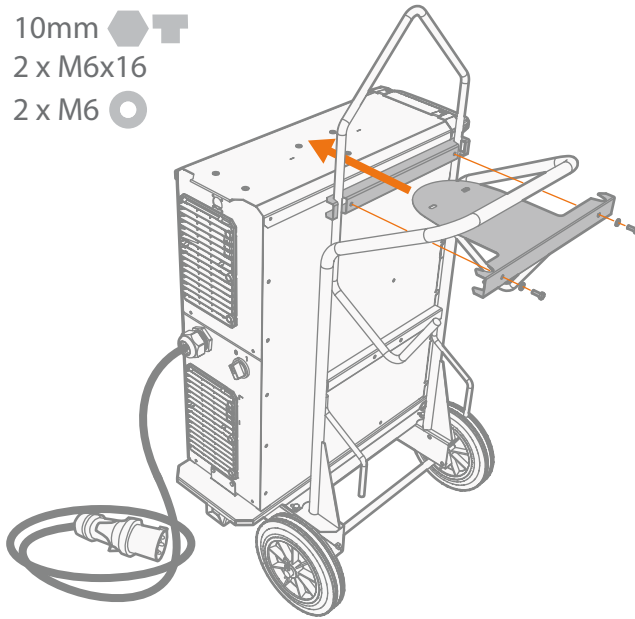

5. T30  
 3 x M6x16
 3 x M6 

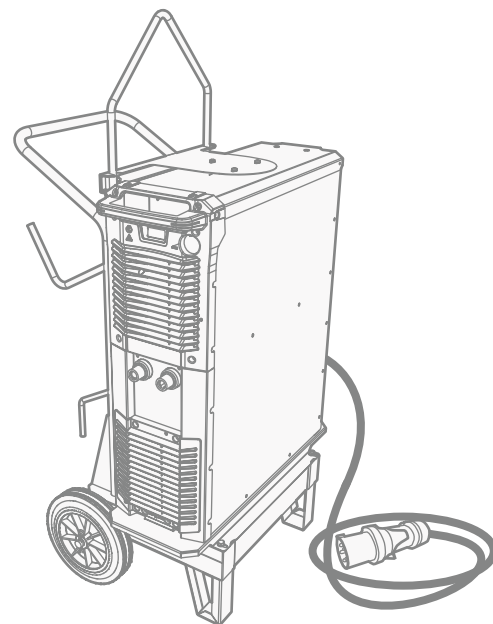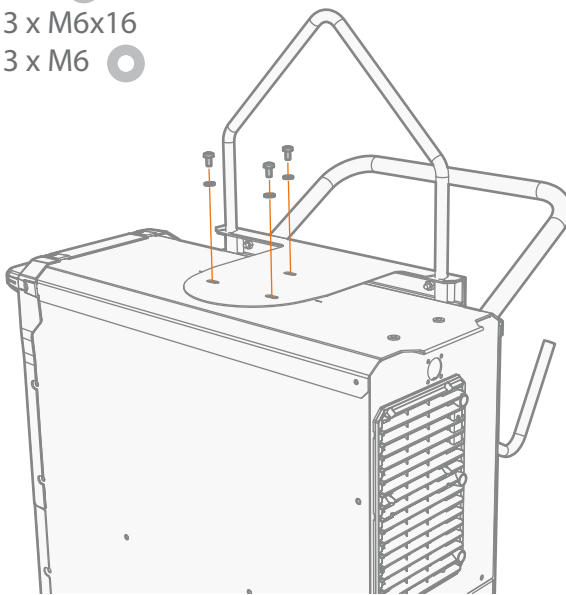

userdoc.kemppi.com

Mounting instructions

W028592 R01

Monteringsvejledninger – Montageanleitungen – Instrucciones de montaje – Asennusohje –
 Instructions de montage – Upute za montažu – Istruzioni di montaggio – Bevestigingsinstructies –
 Monteringsinstruksjoner – Instrukcja montażu – Adisionais de montagem – Instrucțiuni de montare –
 Инструкции по монтажу – Monteringsanvisning – Montaj talimatları – 安装指导

