



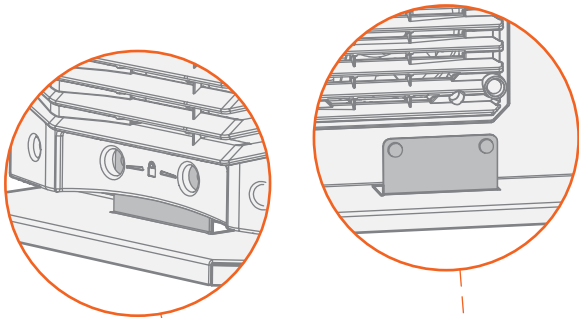

2.

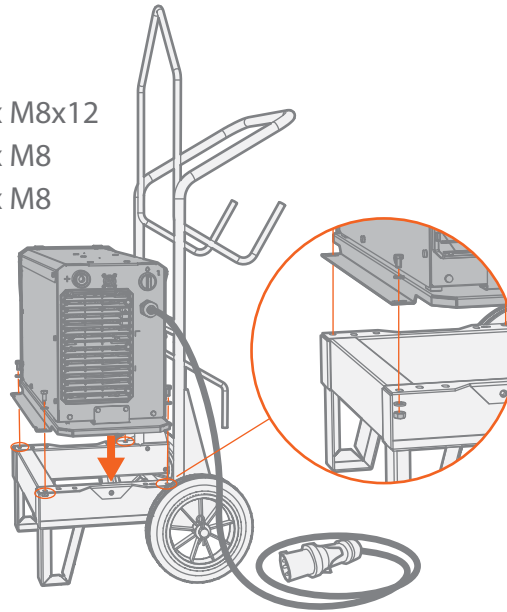

-  4 x M8x12
-  8 x M8
-  4 x M8



3.




-  2 x M6x16
-  2 x M6

4.

-  3 x M6x16
-  3 x M6

1.

-  4 x M5x12

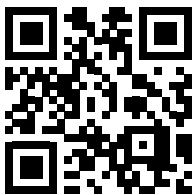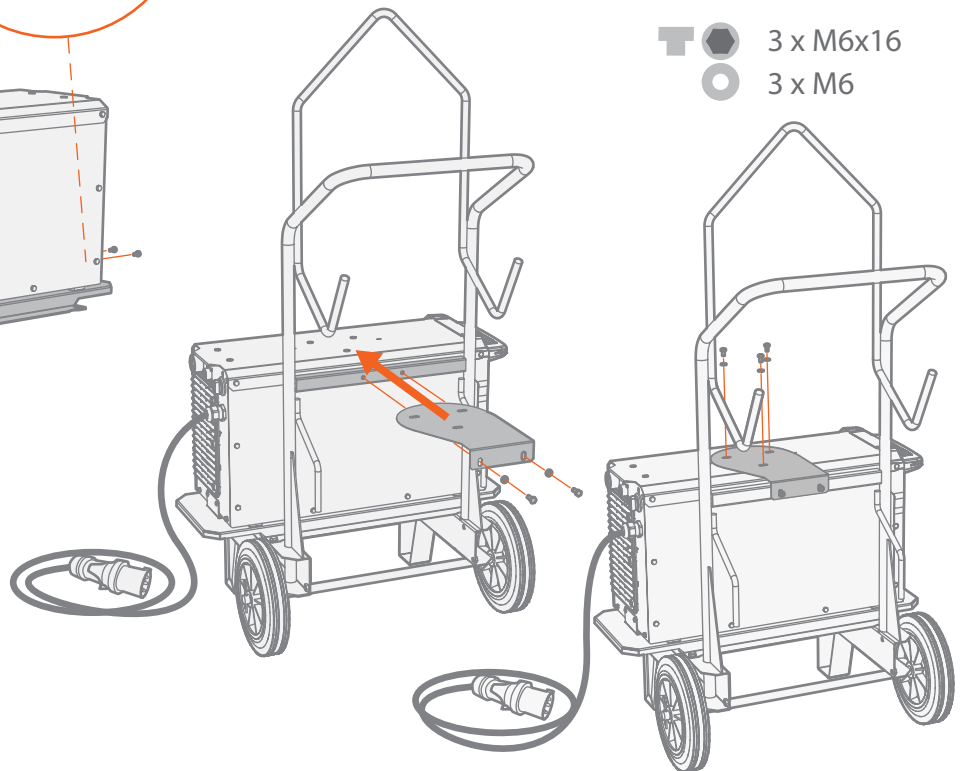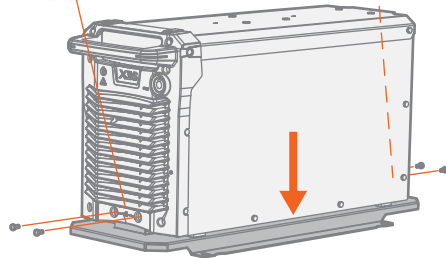



 [userdoc.kemppi.com](http://userdoc.kemppi.com)

Mounting instructions

W028591 R00

Monteringsvejledning - Montageanleitungen - Instrucciones de montaje - Asennusohje -  
 Instructions de montage - Upute za montažu - Istruzioni di montaggio - Bevestigingsinstructies -  
 Monteringsinstruksjoner - Instrukcja montażu - Adisionais de montagem - Instrucțiuni de montare -  
 Инструкции по монтажу - Monteringsanvisning - Montaj talimatları - 安装指导



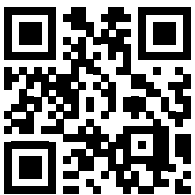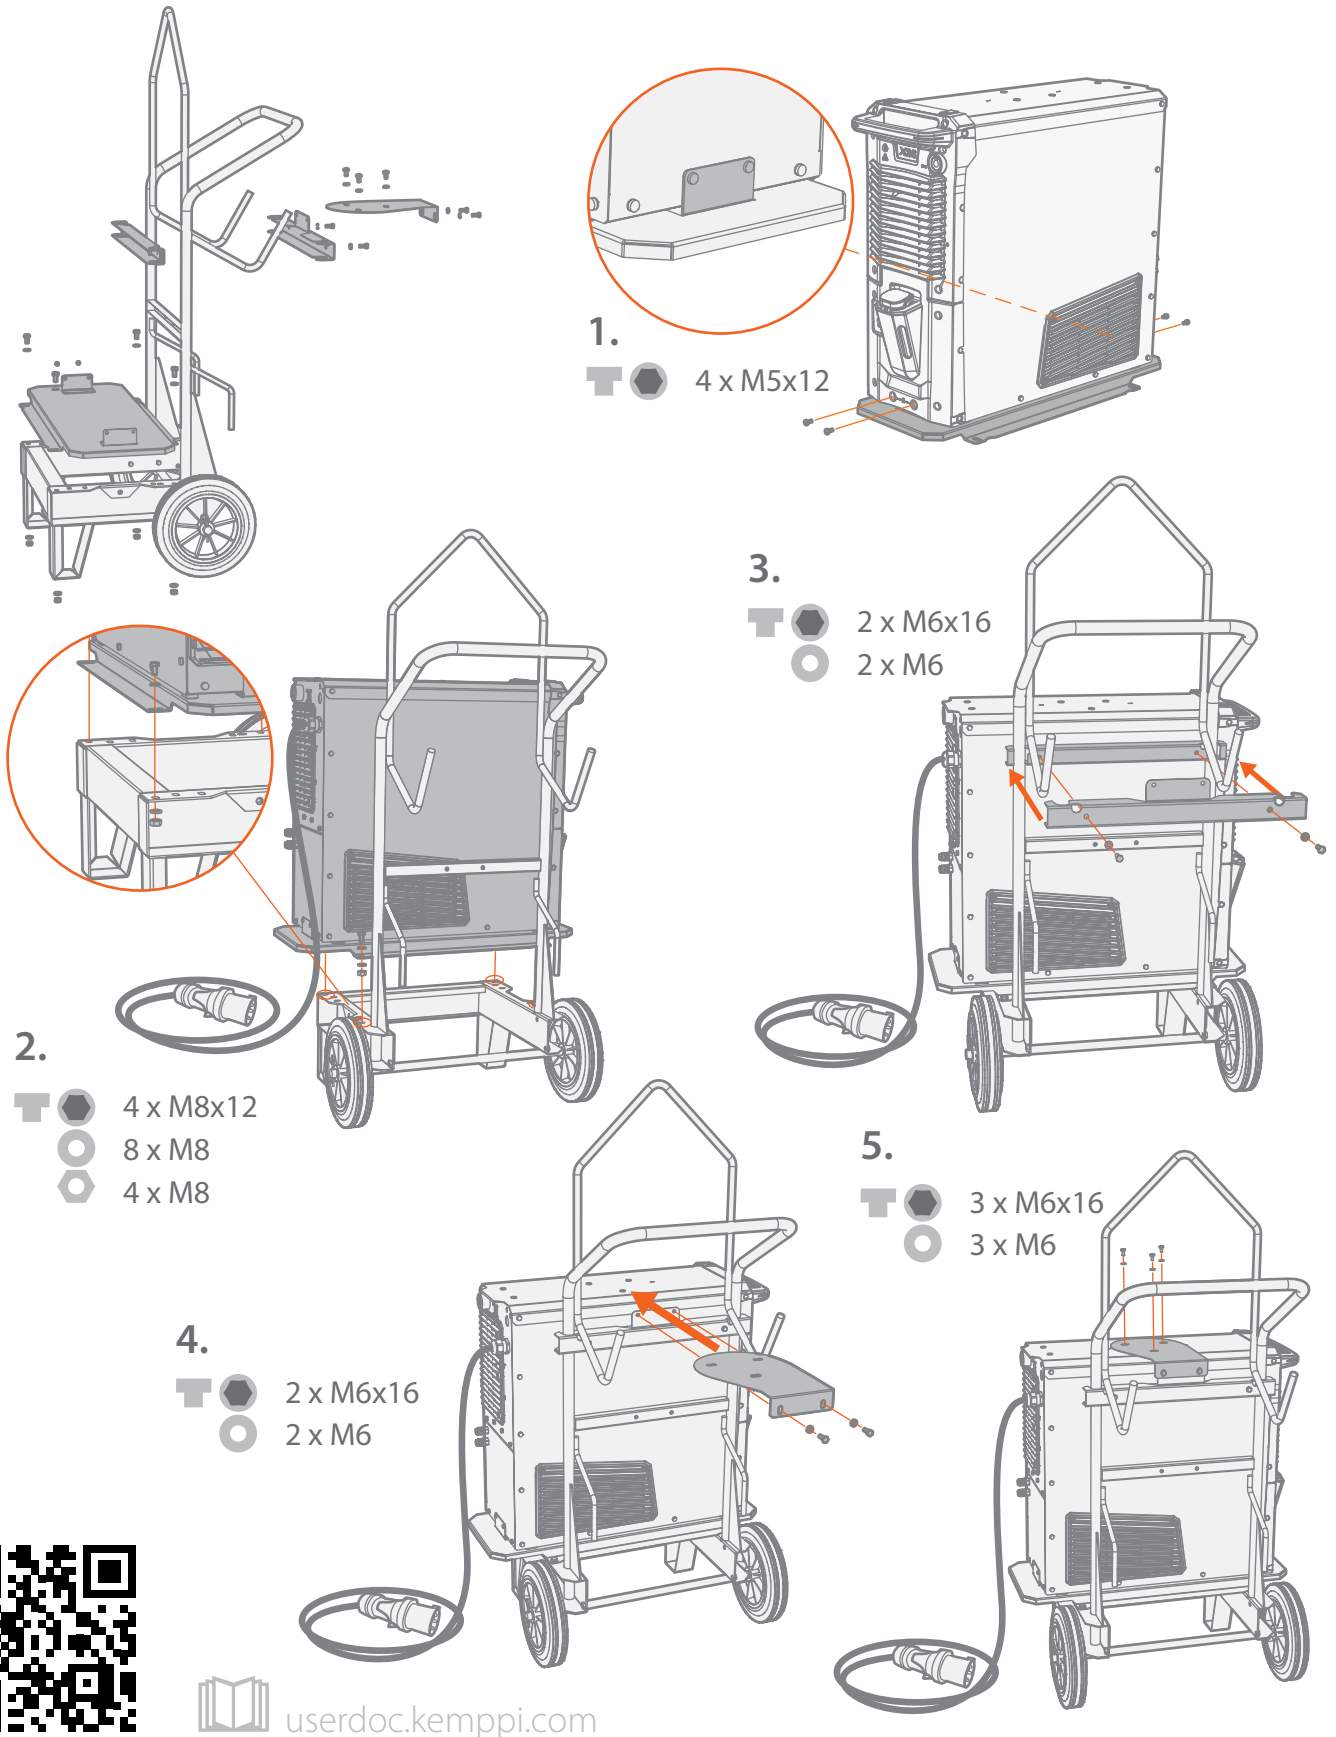

userdoc.kemppi.com

Mounting instructions

W028591 R00

Monteringsvejledninger – Montageanleitungen – Instrucciones de montaje – Asennusohje –  
 Instructions de montage – Upute za montažu – Istruzioni di montaggio – Bevestigingsinstructies –  
 Monteringsinstruksjoner – Instrukcja montażu – Adisionais de montagem – Instrucțiuni de montare –  
 Инструкции по монтажу – Monteringsanvisning – Montaj talimatları – 安装指导